

# Pager Direct Numeric "Cheat Sheet"

## 11.13 Numeric Pager Message Formats

The following show individual page display components:

### PAGER DISPLAY - 10575-20010

This is the last 5 digits of your account number: 410575

**Message ID Digit**  
1=ZONE ALARM  
2=ZONE TROUBLE  
3=AREAS ARMING\*  
4=AREAS DISARMING\*  
6=USER CHECKIN

ALWAYS A ZERO

Zone or Area Number that is sending Alarm or Open/Close, etc.

OK..so what the heck am I talking about??

Example: (The 10575 will always precede alarm message to your pager)

Pager Display:

10575-10010

10575-10001

10575-10005

Lets get tricky now:

10575-30001

10575-30012

10575-40012

What it Means:

Intrusion Alarm on Zone 10

Intrusion Alarm on Zone 1

Intrusion Alarm on Zone 5

System Armed Area 1\* (Perimeter)

System Armed Areas 1,2 (Perimeter & Interior)

System Disarmed Areas 1,2 (Perimeter & Interior)

You get the picture. On some pagers the third zero might be a space or not exist.

Remember Perimeter is Area 1, Interior is Area 2.